FLOMBIRD Urban Intelligence



CWT S4 STEALTH TOUCH Ticket Outlet Replacement

TOOLS NEEDED FOR TICKET OUTLET REPLACEMENT

Tools needed to complete the CWT Stealth ticket outlet replacement

• 7mm Nut Driver




This new Ticket Outlet is compatible with the CWT S2, S3, S4 doors with GeBe Printers installed.

Part number: 24DC175; PRINTER, TICKET OUTLET UP/LOW, CWT S4



Remove the four 4mm flanged nuts on the back of the ticket outlet.



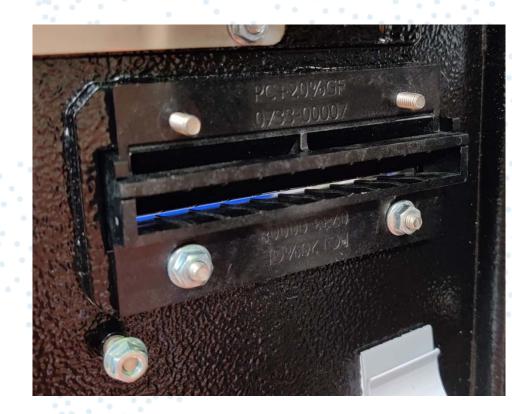



Remove the four 4mm flanged nuts on the back of the ticket outlet. cont





Install the Top/ Front of the new ticket outlet first with two 4mm flanged nuts







Installation

Hold the Top/ Front of the new ticket outlet up while installing the flanged nuts.

This is to make sure it is in the up most position.





When installing the lower / back portion of the ticket outlet will need to be installed with the supplied guide bushings.

These bushings allow for the back portion to travel freely & align with the printer outlet. (5mm of vertical axis travel)







Installing the lower / back portion of the ticket outlet first.

Then insert the supplied guide bushings on the studs before the flanged nuts.





Install the two 4mm flanged nuts on the lower two studs





FLOWBIRD

Installation

Now check to make to the lower back part is moving freely and not binding.





