

# CWT Compact – Printer Removal (Zebra TTP 2030)

Remove Paper – Press the green latch towards the rear of the cabinet and lift up



Remove the paper by pulling it from the back of the printer



# CWT Compact – Printer Removal (GEBE)

Remove Paper – Remove tension spring and pull down on the front of the printer eject chute



Remove the paper by pulling it from the back of the printer




# CWT Compact – Printer Removal (Zebra TTP2030 / GEBE)

Unplug cables – Zebra with V1 or V2



Unplug cables – AVE with GEBE

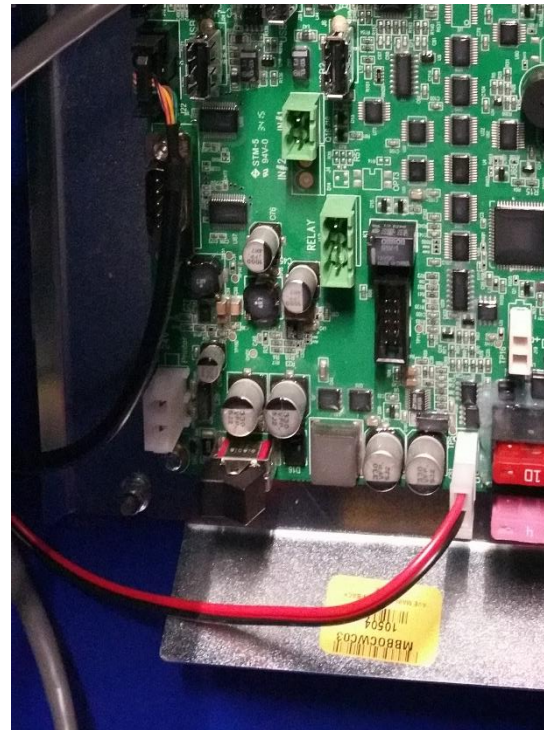


Remove the “E-clips” from both of the Printer hooks




# CWT Compact – Printer Removal (Universal)

Release cable from side of cabinet.

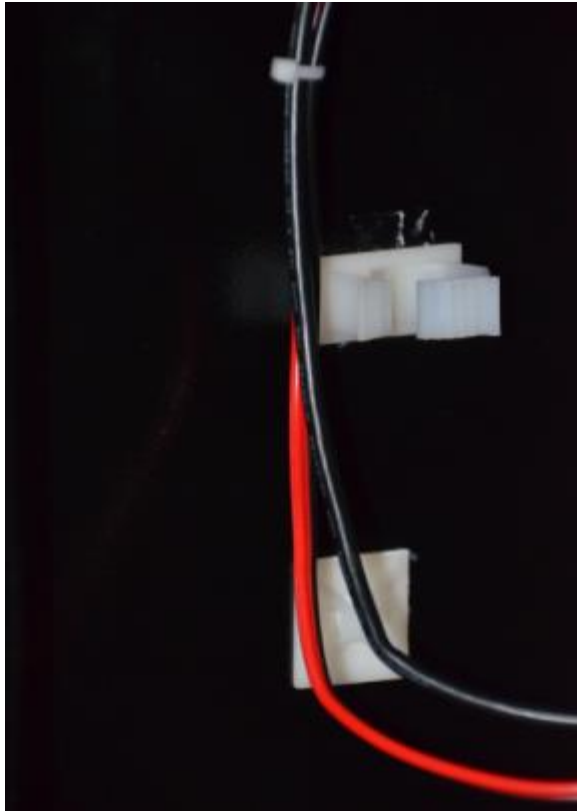

Then lift spring clip to release printer

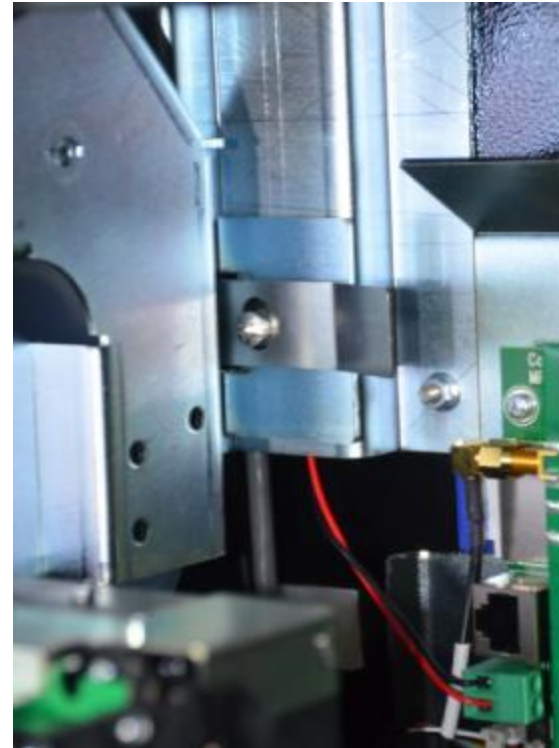


# CWT Compact – Printer Removal (Zebra TTP2030)

Lift up on the printer




Remove all 3 cables from the back of the printer

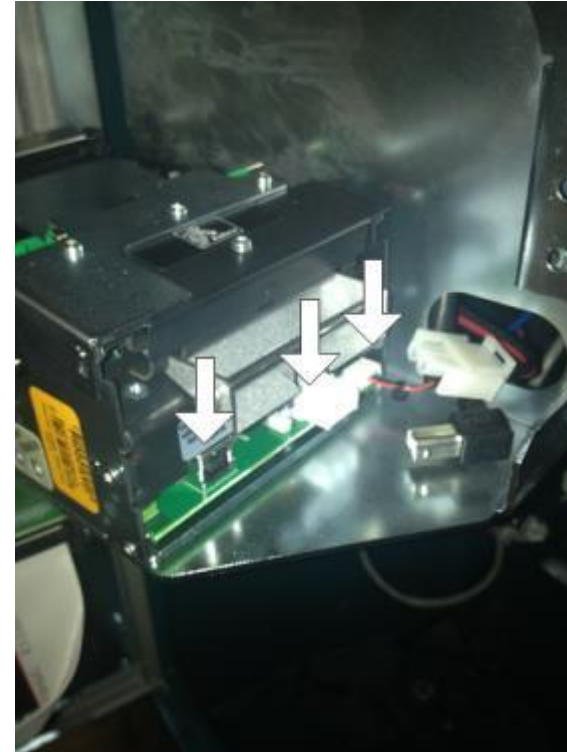


# CWT Compact – Printer Removal (GEBE)

Looking at the rear of the printer, remove all 4 cables from the right side of the printer and 1 from the left

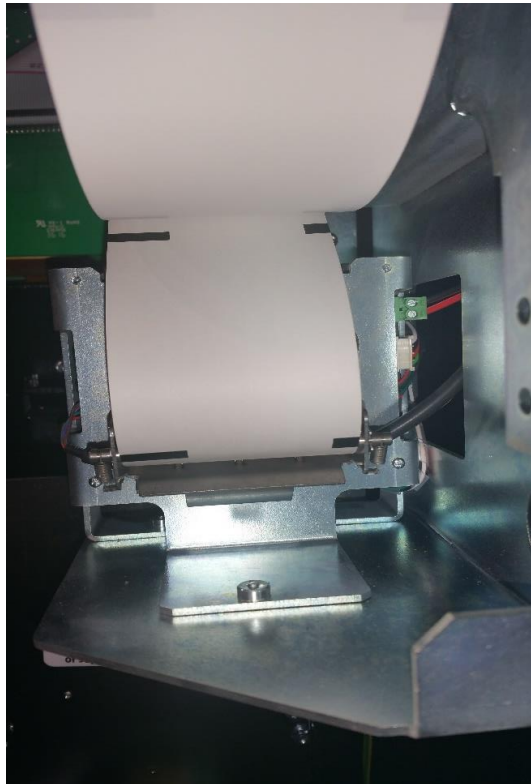

Lift up on the printer

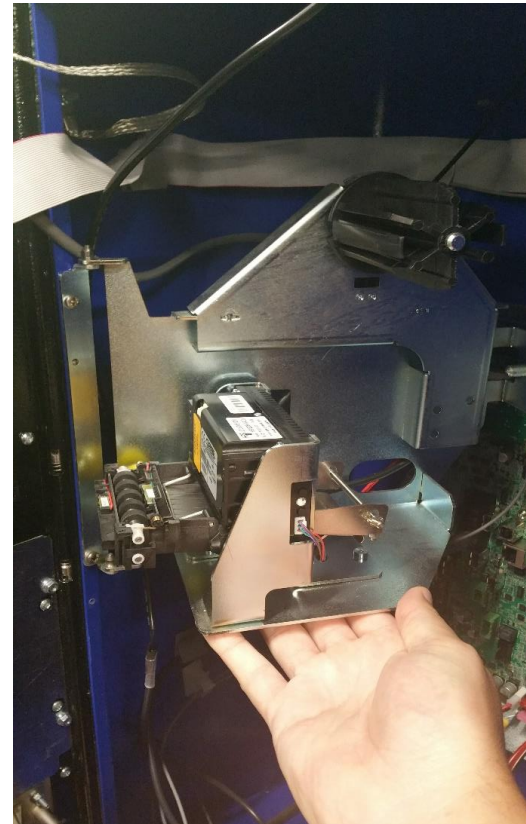

## CWT Compact – Printer Removal (Universal)

- Loosen (not remove) the 3 (T10) screws on the bottom of the printer
- Then push the screws down to the larger holes



# CWT Compact – Printer Installation (Universal)


- Insert the screws on the bottom of the printer into the 3 holes on the printer shelf.
- Push the printer up so that the screws are in the smaller holes.
- Tighten the 3 screws to the shelf.






## CWT Compact – Printer install (GEBE)

Lower the printer down onto the hooks

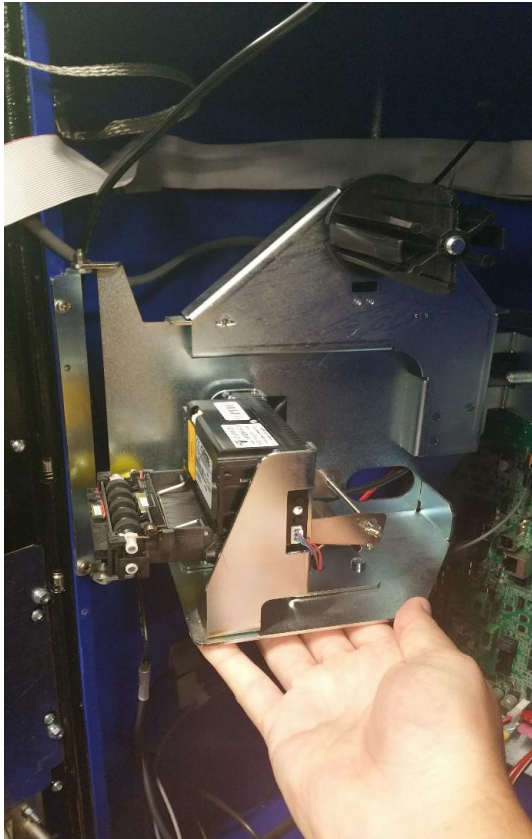


Looking at the rear of the printer, reseal all 4 cables from the right side of the printer and 1 from the left

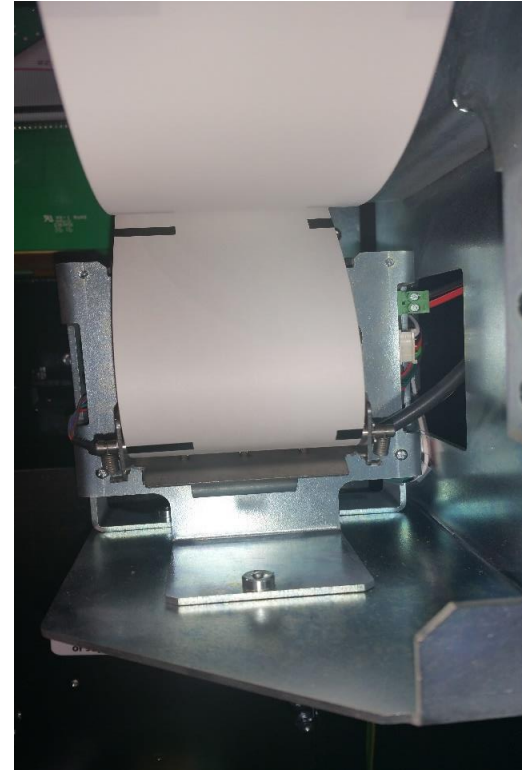


# CWT Compact – Printer Installation (Zebra TTP2030)

Install paper and then press down on the print head cover.

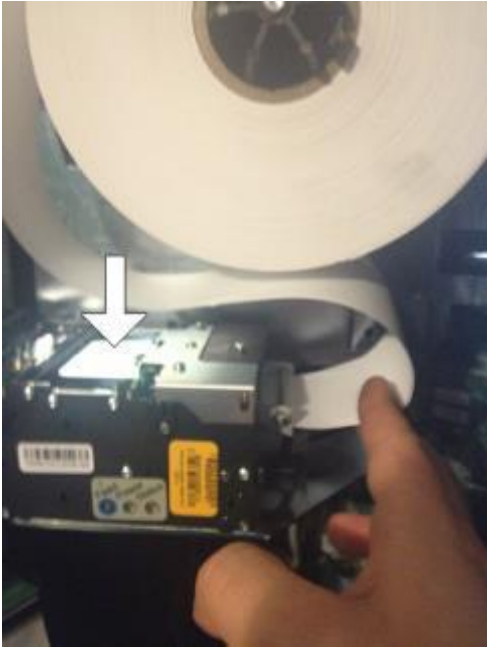



# CWT Compact – Printer Installation (GEBE)

Feed paper back through the printer and then lift up on the printer chute and resecure the lock tab.

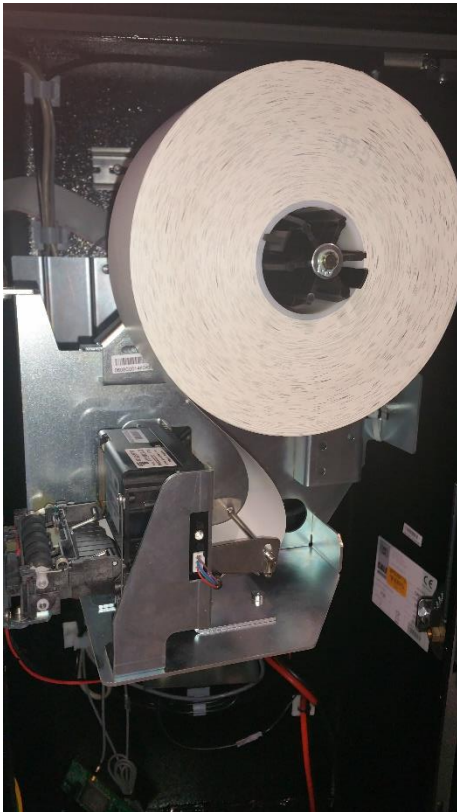

# CWT Compact – Printer Installation (Zebra TTP2030 / GEBE)

Plug in cables – Zebra with V1 or V2  
Plug in cables – AVE with GEBE

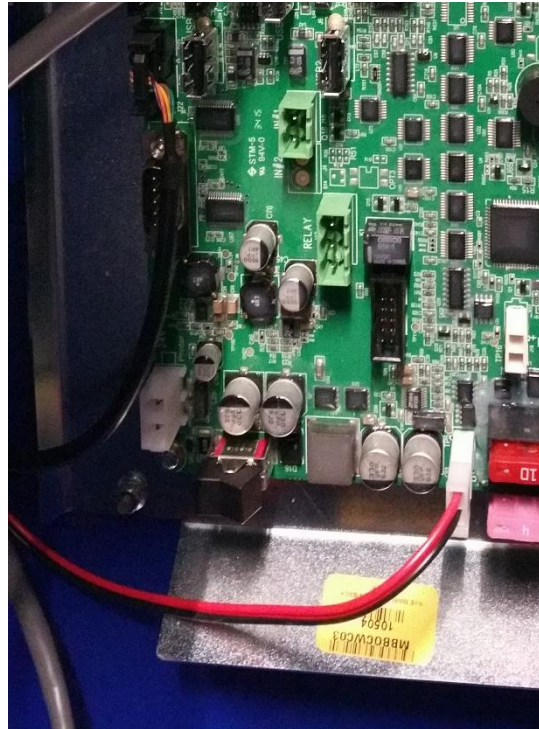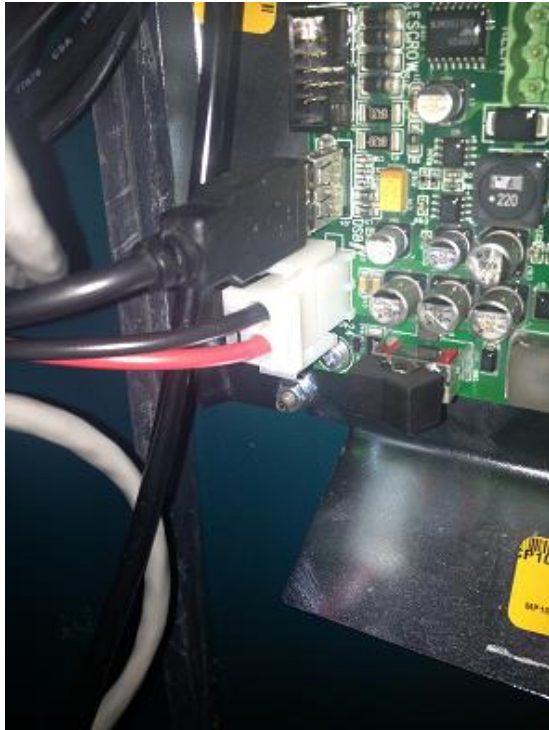

Install the “E-clips” from both of the  
Printer hooks

