

# INSTALLING PAPER INTO THE GEBE PRINTER


Below is the procedure on installing paper into the GEBE Printer into the CALE kiosk.

To install paper into the GEBE, you will want to remove the empty paper roll and place a new paper roll onto the spool inside the meter.

When placing the paper onto the spool make sure the paper is placed in the same direction as in the picture below with the paper looping over the roll. Insert the paper slip **UNDERNEATH** the metal bar and the paper should begin to automatically feed through the printer.



Once the paper has fed through the printer a little, you will want to push the button underneath the green light on the side of the printer to continue feeding the paper through and calibrate the printer.

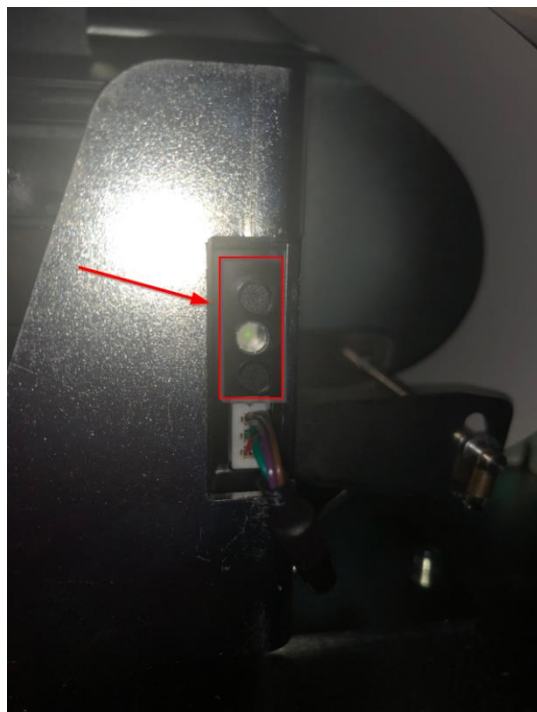

After the printer calibrates, it should automatically cut the paper. You can now remove that slip that was cut and close the door. The meter should print another slip with the meter specs and is ready for operation.